




W Collection

W4OMK581RU1BA

60cm AIR FRY MULTI-FUNCTION PYROLYTIC OVEN IN BLACK

FEATURES & BENEFITS



AIR FRY

Crisp up foods with minimal oil. Ideal for cooking frozen foods, such as fries and chicken nuggets, as well as fresh items like vegetables, meats and fish.



HYBRID FLEXI CLEAN

With the options of Pyrolytic or Smart Clean/Hydrolytic. Pyrolytic technology uses a high-temperature cycle to burn food residues into ashes, which can then be easily wiped away with a sponge. This ensures spotless cleaning with minimal effort.

Smart Clean enables the steam to release during special low-temperature cleaning cycle allows dirt and food residues to be removed with ease. With SmartClean, the oven can be cleaned quickly and environmentally.



COOK 3

Allows 3 different dishes to be cooked simultaneously on different levels, thanks to a special airflow that prevents aromas and flavours from mixing - saving time and energy.



TELESCOPIC SHELF

Extremely helpful for checking how the cooking is coming along, allow to easily insert, slide out or remove grids and casseroles.



MAXI COOKING

Perfectly cook big portions of food with Maxi Cooking. Ideal for big roasts.



WARRANTY

5 Year warranty on parts and labour.

TECHNICAL SPECIFICATIONS


COLOUR/FINISH	Black
DISPLAY	LED Digital
CONTROL	Push Knobs
DOOR / HANDLE DESIGN	Full Glass Door with Black Handle
CAVITY TYPE	Enamelled
CAPACITY	71 litres
COOKING SHELVES	5 shelves
WEIGHT	26.9kg
PRODUCT DIMENSION	W 595mm x H 595mm x D 551mm
CUT OUT DIMENSION	W 560mm x H 583mm x D 560mm
HEATING TEMPERATURE	60°C to 250°C
FUNCTIONS	Conventional, Forced Air, Grill, Turbo Grill, Rising, Air Fry, Pizza, Eco Forced Air, Maxi Cooking, Bread Auto, Pastry Auto, Power Management, Delay Start
CLEANING	Hybrid (Pyrolytic+Hydrolytic) Cleaning
ENERGY CONSUMPTION	0.89 kwh/cycle
ACCESSORIES	2 x Wire Shelf, 1 x Baking Tray, 1 x Deep Tray
MAX. TOTAL POWER	3300W
VOLTAGE	220-240 V
CURRENT	16 amp
ELECTRICAL CORD	100cm
PACKAGING DIMENSIONS	W 640mm x H 670mm x D 650mm
GROSS WEIGHT	28.2kg
NET WEIGHT	26.9kg
PLACE OF MANUFACTURE	Poland
WARRANTY	Five Year Parts and Labour

DISTRIBUTED BY ARISIT PTY LTD


40-50 Mark Anthony Drive, Dandenong South VIC 3175
Ph: 1300 762 219 Fax: 03 9768 0838 Website: www.arisit.com

08/2025

INSTALLATION GUIDE

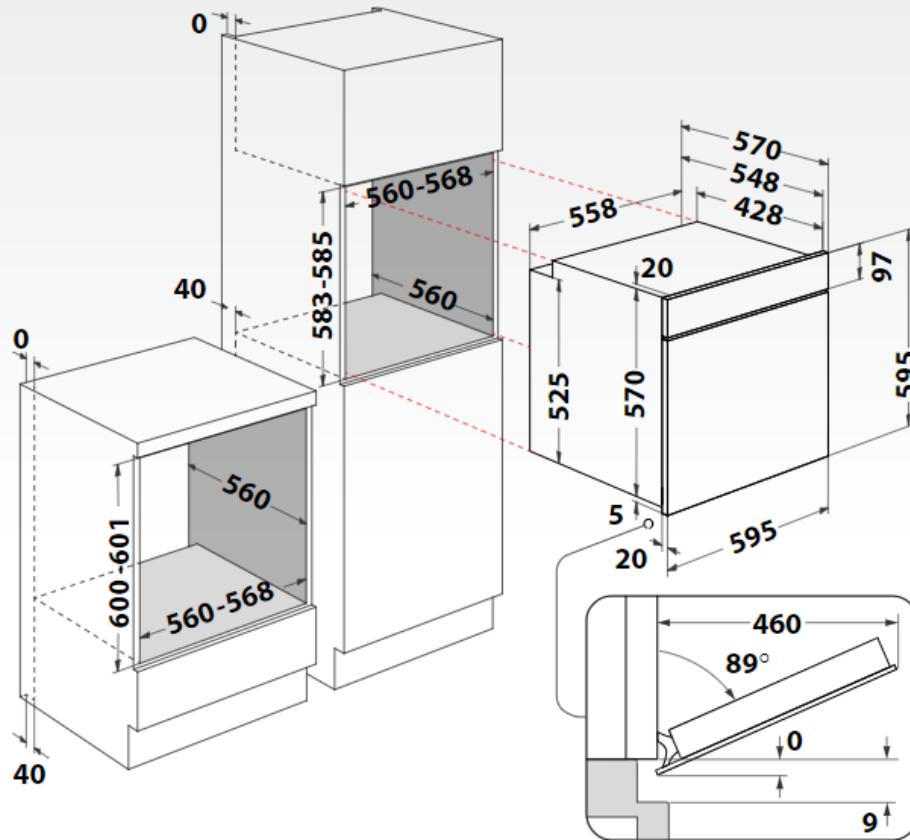


CONTROL PANEL

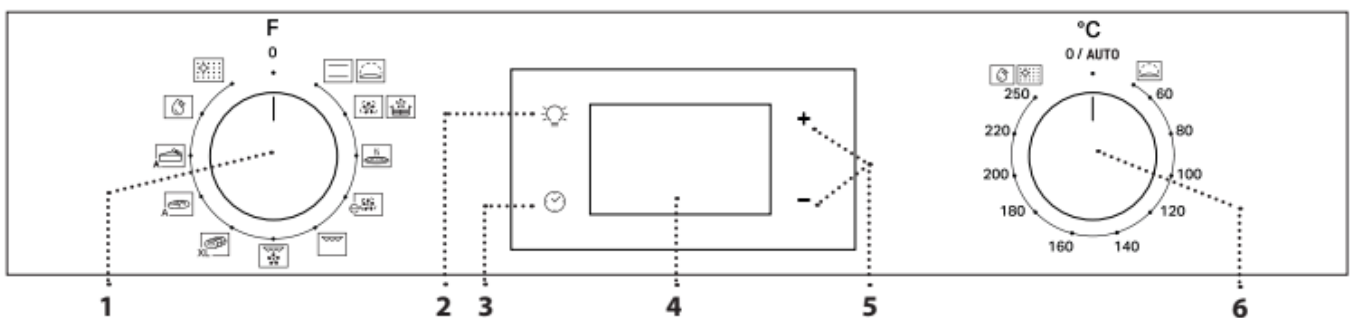

1. SELECTION KNOB

For switching the oven on by selecting a function. Turn to the **0** position to switch the oven off.

2. LIGHT

With the oven switched on, press  to turn the oven compartment lamp on or off.

3. SETTING THE TIME

For accessing the cooking time settings, delayed start and timer.

For displaying the time when the oven is off.

4. DISPLAY

5. ADJUSTMENT BUTTONS

For changing the cooking time settings.

6. THERMOSTAT KNOB

Turn to select the temperature you require when activating manual functions.

Please note: Type of knobs may vary from model type. If the knobs are push-activated, push down on the center of the knob to release it from seating.